



Sony SLT-A57 Battery Replacement

We want to take out old faulty battery and replace it with a brand new charged one.

Written By: john bogart





PARTS:

- [Sony SLT-A57 Replacement Batteries](#) (1)
-

Step 1 — Find battery capartment



- Flip the camera upside down and look for the arrow pointing to the word battery.

Step 2 — Open battery compartment



- Push the arrow down to side to open the compartment.

Step 3 — Replace battery



- Put the new Sony Alpha SLT-A57 Digital Camera Battery in with negative side on top of the spring. Then shut the compartment slide.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 02:11:57 PM.